

BYD BATTERY-BOX PREMIUM HVS&HVM COMPATIBLE INVERTER LIST - V2.19



[DE] BYD Battery-Box Premium HVS / HVM kompatible Wechselrichterliste

[ES] Lista de Inversores Compatibles con Battery-Box Premium HVS/HVM

[IT] Lista di Configurazione Minima e degli Inverter Compatibili con BYD Battery-Box Premium HVS/HVM

Inverter [DE] Wechselrichter [ES] Inversores [IT] Inverter	Module Quantity [DE] Modulanzahl [ES] Cantidad de módulo [IT] Quantità moduli		Minimum Firmware Version						
	HVS	HVM	Single Tower [DE] Einzelturm / [ES] torre única / [IT] torre singola				Parallel Connection [DE] Parallelschaltung / [ES] conexión paralela / [IT] connessione parallela		
			Inverter	Battery-Box		Inverter	Battery-Box		
				BMU	BMS		BMU	BMS	
Fronius	Symo Hybrid	—	3-8	1.16.6-1	3.13	3.19	1.16.7-1	3.14	3.20
	Symo GEN24 Plus	2-5	4-8	1.9.7-0	3.13	3.19	1.10.5-0	3.14	3.20
	Primo GEN24 Plus	2-3	4-7	1.11.6-0	3.15	3.21	same as single tower		
	Note: Parallel connection is not possible for Fronius inverters in the configuration: 3 x HVM 22.1 [DE] Parallelschaltung ist mit Fronius Wechselrichtern nicht möglich für die Konfiguration: 3 x HVM 22.1 [ES] La conexión en paralelo no es posible para los inversores Fronius en la configuración: 3 x HVM 22.1 [IT] Il collegamento in parallelo non è possibile per gli inverter Fronius nella configurazione: 3 x HVM 22.1								
GoodWe	ET (5-10kW)/BT	2-5	4-8	ARM 11	3.13	3.19	same as single tower		
	EH/BH	2-4	3-8						
	EHB	2-4	3-8						
	ET (15-30kW) *	2-5	4-8	ARM 09, DSP 08	3.20	3.27	same as single tower		
	* Note: If HVS/HVM batteries are connected in parallel with the ET (15-30kW), the BYD combiner box cannot be used and the wiring must be done by the installer (according to local regulations) [DE] Bei HVS/HVM Parallelschaltung am ET (15-30kW) kann die BYD Combiner Box nicht verwendet werden und die Verkabelung muss vom Installateur (gemäß den lokalen Vorschriften) selbst vorgenommen werden. [ES] Si las baterías HVS/HVM están conectadas en paralelo con el ET (15-30kW), no se puede utilizar la caja combinadora BYD y el cableado debe realizarlo el instalador (de acuerdo con las regulaciones locales). [IT] Se le batterie HVS/HVM sono collegate in parallelo con l'ET (15-30kW), il combiner box BYD non può essere utilizzato e il cablaggio deve essere effettuato dall'installatore (secondo le normative locali).								
Viessmann	A3	2-5	4-8	ARM 11	3.13	3.19	same as single tower		
KOSTAL	Plenticore Plus 3.0 (G2)	2-5	4	01.42	3.13	3.19	same as single tower		
	Plenticore Plus 4.2/5.5/7.0/8.5/10.0 (G2)	2-5	4-8						
	Plenticore BI 5.5-13	2-5	5-8						
	Plenticore BI xx/26 (G2)	2-5	5-8						
	Piko MP Plus 1.5-1/2.0-1/ 2.5-1	2-3	3-4	PU-APP 3.7.0, KSEM 1.2.0.	3.13	3.19			
	Piko MP Plus 3.0-1, 3.0-2, 3.6-1, 3.6-2, 4.6-2, 5.0-2	2-5	3-8	2.32	3.16	3.24			
	PIKO 6.0 BA / 8.0 BA / 10 BA	2-4	4-8	3.03.20	3.13	3.19			
SMA	Sunny Boy Storage 2.5	2-4	—	3.11.06R	3.15	3.21	same as single tower		
	Sunny Boy Storage 3.7/5.0/6.0	2-4	3-8	For HVS: 3.11.03R For HVM: 3.11.10R	3.13	3.19	—		
	STP 5.0-10.0 SE	2-5	4-8	3.00.02.R	3.16	3.24	same as single tower		
	Sunny Boy Smart Energy 3.6 / 4.0 / 5.0 / 6.0	2-4	3-8	3.08.03.R	3.23	3.28			
	Note: For SBS 3.7 / 5.0 / 6.0 no parallel connection - check inverter manual how to connect up to three batteries [DE] Für SBS 3.7 / 5.0 / 6.0 keine Parallelschaltung - siehe Wechselrichterhandbuch, wie man bis zu drei Batterien anschließt [ES] Para SBS 3.7 / 5.0 / 6.0 sin conexión en paralelo disponible: consulte el manual del inversor sobre cómo conectar hasta tres baterías [IT] Per SBS 3.7 / 5.0 / 6.0 nessuna connessione parallela è disponibile - controllare il manuale dell'inverter come collegare fino a tre batterie								
Sungrow	SH5.0/6.0/8.0/10RT	2-5	4-8	ARM, V11_V01_B MDSP, V11_V01_B	3.13	3.19	same as single tower		
	SH3.0/3.6/4.0/5.0/6.0RS	2-4	3-8	ARM, 01011.02.16 MDSP, 03011.02.15	3.16	3.24			



BYD Company Limited
www.bydbatterybox.com
Global Sales: batteryboxgrp@byd.com
Global Service: bboxeservice@byd.com

Battery-Box EU Service Partner
EFT-Systems GmbH
www.eft-systems.de
info@eft-systems.de

Battery-Box AU Service Partner
Alps Power Pty Ltd
www.alpspower.com.au
service@alpspower.com.au

Battery-Box US Service
BYD AMERICA LLC
www.bydbatterybox.com
us.homeenergy@byd.com



BYD BATTERY-BOX PREMIUM HVS&HVM COMPATIBLE INVERTER LIST - V2.19



[DE] BYD Battery-Box Premium HVS / HVM kompatible Wechselrichterliste

[ES] Lista de Inversores Compatibles con Battery-Box Premium HVS/HVM

[IT] Lista di Configurazione Minima e degli Inverter Compatibili con BYD Battery-Box Premium HVS/HVM

Inverter [DE] Wechselrichter [ES] Inversores [IT] Inverter	Module Quantity [DE] Modulanzahl [ES] Cantidad de módulo [IT] Quantità moduli	Minimum Firmware Version							
		Single Tower					Parallel Connection		
		[DE] Einzelturm / [ES] torre única / [IT] torre singola					[DE] Parallelschaltung / [ES] conexión paralela / [IT] connessione parallela		
		Inverter	Battery-Box		Inverter	Battery-Box			
BMU	BMS		BMU	BMS					
HVS	HVM								
GE	GEH 5.0/8.6/10-1U-10	2-4	3-8	000019	3.17	3.24	same as single tower		
KACO	Blueplanet hybrid 6.0- 10.0 TL3	2-4	3-8	5.8.6.3.7	3.13	3.19	same as single tower		
KACO NH	Blueplanet hybrid 6.0-12.0 NH3 M2	2-5	3-8	DSP: 610-05001-01 ARM: 610-50062-08	3.21	3.28	same as single tower		
	Blueplanet hybrid 8.0-12.0 NH3 M3	2-5	3-8		3.21	3.28	same as single tower		
Ingeteam	ISS 1Play 3TL M / 6TL M	2-4	3-8	ABH1007_F	3.15	3.22	same as single tower		
	Note: Only compatible with BCU produced since 1st October, 2020 [DE] Nur kompatibel mit BCU, die seit dem 1. Oktober 2020 produziert wurden [ES] Solo compatible con BCU fabricados desde el 1 de octubre de 2020 [IT] Compatibile solo con BCU prodotte dal 1 ottobre 2020								
Solis	RHI-3P(5-10)K-HVES-5G	2-5	4-8	V090037	3.16	3.22	V090037	3.16	3.24
	S6-EH3P(3-10)K-H-EU	2-5	3-8	V01-1B	3.20	3.26	same as single tower		
	S6-EH3P(3-10)K2-H	2-5	3-8	V01-1B	3.20	3.26	same as single tower		
	S6-EH3P(12-20)K-H	2-5	3-8	ARM: 0208	3.24	3.30	same as single tower		
	S6-EH3P(29.9-50)K-H	2-5	4-8	HMI: 0402 DSPM: 0401 HMI-LCD: 012C Datalogger: 1001318	3.24	3.30	same as single tower		
Canadian Solar	CSI-TE Series	2-5	4-8	ARM 11	3.18	3.26	same as single tower		
	CSI-HE Series	2-4	3-8						
	CSI-BHE Series	2-4	3-8						
Deye	SUN-(5-20)K-SG01HP3-EU-AM2	2-5	4-8	2001-C016	3.19	3.26	Same as single tower		
	SUN-50K-SG01HP3-EU-BM4	2-5	4-8	C032-1077+	3.24	3.29	Same as single tower		
Solplanet	ASW H-T2 Series	2-5	3-8	DSP: 610-05001-01 ARM: 610-50062-08	3.21	3.28	same as single tower		
	ASW H-T3 Series	2-5	3-8		3.21	3.28	same as single tower		
Western CO	HHS 3000-6000	2-4	3-8	Ver.46	3.22	3.28	same as single tower		
	HBS 3000-6000	2-4	3-8	Ver.16	3.22	3.28	same as single tower		
	HHT 5000-12000	2-5	4-8	Ver.53	3.22	3.28	same as single tower		
	HBT 5000-12000	2-5	4-8	Ver.53	3.22	3.28	same as single tower		
Sosen	SSE-HH3K-6K-P1-EU	2-4	3-8	Newest DSP: V3.01 Slave DSP: V1.02 ARM: V1.17	3.21	3.28	same as single tower		
Hoymiles	HYT-HV-EUG1 Series	2-5	4-8	V1.00.00	3.23	3.27	same as single tower		
	HYT-HV-AUG1 Series	2-5	4-8	V1.00.00	3.23	3.27	same as single tower		
	HAT-HV-EUG1 Series	2-5	4-8	V1.00.00	3.23	3.27	same as single tower		
Afore	AF(3-20)K-TH	2-5	4-8	Main program: 1.57 Display board: 1.42	3.24	3.29	same as single tower		
	AF25K-TH/AF30K-TH	2-5	4-8	Main program: 1.56 Display board: 1.42	3.24	3.30	same as single tower		
Kontron Solar	SolBrid 10-3-2/10-3-4	2-5	3-8	V.2.0.0	3.24	3.29	same as single tower		



BYD Company Limited
www.bydbatterybox.com
Global Sales: batteryboxgrp@byd.com
Global Service: bboxeservice@byd.com

Battery-Box EU Service Partner
EFT-Systems GmbH
www.eft-systems.de
info@eft-systems.de

Battery-Box AU Service Partner
Alps Power Pty Ltd
www.alpspower.com.au
service@alpspower.com.au

Battery-Box US Service
BYD AMERICA LLC
www.bydbatterybox.com
us.homeenergy@byd.com



BYD BATTERY-BOX PREMIUM HVS&HVM COMPATIBLE INVERTER LIST - V2.19



[DE] BYD Battery-Box Premium HVS / HVM kompatible Wechselrichterliste

[ES] Lista de Inversores Compatibles con Battery-Box Premium HVS/HVM

[IT] Lista di Configurazione Minima e degli Inverter Compatibili con BYD Battery-Box Premium HVS/HVM

Inverter [DE] Wechselrichter [ES] Inversores [IT] Inverter	Module Quantity [DE] Modulanzahl [ES] Cantidad de módulo [IT] Quantità moduli	Minimum Firmware Version					
		Single Tower			Parallel Connection		
		[DE] Einzelturm / [ES] torre única / [IT] torre singola			[DE] Parallelschaltung / [ES] conexión paralela / [IT] connessione parallela		
		Inverter	Battery-Box		Inverter	Battery-Box	
BMU	BMS		BMU	BMS			
Maxhub	PHN(5-10)KT-BH2	2-5	4-8	V1.0.0.00	3.24	3.29	same as single tower

- Note:**
- Always install the latest firmware on the Battery-Box!
 - Requirements for Parallel Connection: Maximum three battery systems could be connected in parallel; HVS system CANNOT be connected in parallel with HVM system; Every tower connected in parallel requires the same module quantity

- [DE] Bemerkung:**
- Installieren Sie immer die neueste Firmware auf der Battery-Box!
 - Anforderungen an Parallelschaltung: Es dürfen maximal drei Batteriesysteme parallel geschaltet werden; Ein HVS-System kann NICHT mit einem HVM-System kombiniert werden; Jeder parallel geschaltete Turm benötigt die gleiche Modulanzahl

- [ES] Nota:**
- ¡Instale siempre el firmware más reciente en la Battery-Box!
 - Requisitos para la conexión en paralelo: se pueden conectar en paralelo un máximo de tres sistemas de baterías; El sistema HVS NO PUEDE conectarse en paralelo con el sistema HVM; Cada torre conectada en paralelo requiere la misma cantidad de módulos por torre

- [IT] Nota:**
- Installare sempre l'ultimo firmware sul Battery-Box!
 - Requisiti per il collegamento in parallelo: è possibile collegare in parallelo un massimo di tre sistemi di batterie; Il sistema HVS NON può essere collegato in parallelo al sistema HVM; Ogni torre collegata in parallelo richiede la stessa quantità di moduli per torri

The information in this document is subject to change without notice. Please take the latest version of this document at our websites into account.

[DE] Die Informationen in diesem Dokument können ohne vorherige Ankündigung geändert werden. Bitte berücksichtigen Sie die neueste Version dieses Dokuments auf unseren Websites.

[ES] La información de este documento está sujeta a cambios sin previo aviso. Tenga en cuenta la última versión de este documento en nuestros sitios web.

[IT] Le informazioni contenute in questo documento sono soggette a modifiche senza preavviso. Si prega di prendere in considerazione l'ultima versione di questo documento sui nostri siti web.

